

Lexus Personalized Settings

RX400h

| SYSTEM | QUICK FEATURE REFERENCE | CUSTOMIZED SETTING |
|----------------------------|---|---|
| Door Lock Systems | 1. Unlocking the driver's door/ all passenger doors. | By pressing the remote key door unlock button, the following functions can be programmed: ○ 1. Pressing the unlock button one time will unlock all doors. (Rear included) s 2. Pressing the unlock button one time unlocks the driver's door, and two times unlocks all doors. (Standard) |
| | 2. Flashing of signal lights | Using the remote key, the following functions can be programmed: ○ 1. Press the LOCK/UNLOCK button on the remote key and the lights will not flash. s 2. Press the LOCK button and the lights will flash once, press the UNLOCK button and the lights will flash twice. (Standard) |
| | 3. Unlocking of doors when placing vehicle into park | While the engine is running and the vehicle is placed into park the vehicle can be programmed as follows: s 1. When placing the vehicle into park, all of the doors will remain LOCKED. (Standard) ○ 2. When placing vehicle into park, ALL the doors will automatically UNLOCK. |
| | 4. Locking of doors when shifting from park into another range | While the brake pedal is being pressed and the vehicle is taken out of park and placed into another range, the doors can be programmed as follows: ○ 1. Remain unchanged. s 2. Automatically lock. (Standard) |
| Power Window | 5. Using remote key to open all windows | Pressing the UNLOCK button on the remote key for 2.5 seconds, the vehicle can be programmed as follows: ○ 1. The windows will not roll down. s 2. All the windows will roll down. (Standard) *Note: See slide roof for additional options. |
| Moon Roof | 6. Using the remote key to open moon roof (Lexus calls the sliding roof a moon roof.) | By pressing the UNLOCK button on the remote key for 2.5 seconds, the following options can be programmed: ○ 1. The moon roof will not open. s 2. The moon roof will open. (Standard) *Note: Option #5 must be on. |
| | 7. Using the remote key to open/ tilt moon roof | When option #5 and #6 are active, the moon roof can be programmed for the following: s 1. Slide (Standard) ○ 2. Tilt |
| Lighting Systems | 8. Illumination of cabin light | After closing the door, the interior lights can be adjusted to stay on for the following: ○ 1. 7.5 seconds s 2. 15 seconds (Standard) ○ 3. 30 seconds |
| | 9. Delay for headlights to turn off | After turning off the ignition and all the doors are closed, if the headlights are ON or in the AUTO position, the lights can be programmed for the following: ○ 1. Turn off immediately, when the vehicle is turned off and the driver door is opened. s 2. Turn off in 30 seconds (Standard) ○ 3. Turn off in 60 seconds ○ 4. Turn off in 90 seconds |
| | 10. Sensitivity of the automatic headlights | While driving the vehicle and the headlight switch is placed in the "AUTO" mode, the front headlights can be programmed to turn on under darker or lighter ambient light conditions. Circle setting selection: Very Light (Standard) Normal Very Dark ① ② ③ ④ ⑤ Normal = 3 (Standard) |
| Tilt Steering Wheel | 11. Auto tilt away of the steering wheel | When the vehicle is placed in park, the ignition turned off, and the key is removed from the ignition, the steering wheel can be set to the following: s 1. Automatically move up and away from the driver position setting. (Standard) ○ 2. Remain in the current position, as set by the driver. |
| Air Conditioner | 12. Automatic recirculation of air when using A/C | While the air conditioner is ON or in AUTO, the vehicle can be programmed for the following: s 1. To automatically switch between the recirculation mode and fresh air mode as necessary to meet the temperature requirements set. (Standard) ○ 2. When the climate control is turned on, the user must manually select the desired mode, recirculation or fresh air mode. |
| Power Back Door | 13. Back door buzzer | When opening the rear door, the buzzer volume can be programmed for the following: ○ 1. 6-7 high beeps activate when opening/closing. ○ 2. 6-7 medium beeps activate when opening/closing. s 3. 2 medium beeps activate when opening/closing the vehicle. (Standard) |
| | 14. Power back door assist | After unlocking all of the doors, and manually pressing the release button on the rear door, the vehicle can be programmed for the following: s 1. When pressing the release button, the door must be opened manually. (Standard) ○ 2. When pressing the release button, the rear door will be assisted and open automatically. |
| | 15. One motion power back door | When opening the rear door, the vehicle can be programmed for the following: s 1. After unlocking all the doors, then pressing the rear door release button on the remote key or inside the vehicle, the rear door will open automatically. (Standard) ○ 2. After pressing the rear door release button on the remote key or inside the vehicle, the rear door will open. (Doors do not need to be unlocked first) *Note: Option #16 is not available if one motion is selected. |
| | 16. Power back door | To open the rear door, after unlocking the doors, the rear door can be programmed for the following: ○ 1. After momentarily pressing the rear door release button on the remote key, the rear door will open. ○ 2. After pressing the rear door release button twice on the remote key, the rear door will open. s 3. After pressing and holding the rear door release button on the remote key for 0.8 seconds, the rear door will open. (Standard) ○ 4. The rear door, release door button is turned off and will not function. |

Vehicle Identification Number (VIN)

Customer Signature

Date

* The customize features must be programmed by your Lexus dealer.

S = Standard setting O = Optional setting